
433-CMU-40 Economy Central Monitor

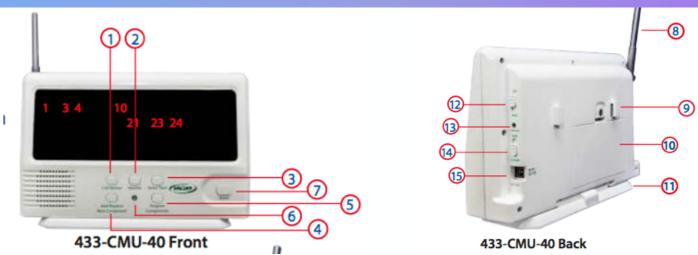

1) Call Review Button. 2) Volume Button. 3) Voice/Tone Button. 4) Add/Replace New Component Button. 5) Programme Components Button. 6) Programming Light. 7) Reset Button. 8) Antenna. 9) Hook. 10) Battery Compartment. 11) Base. 12) Call/Alarm Switch. 13) Silencer Port. 14) Lock/Unlock Switch. 15) AC Adaptor Input

Programming / Setup

- Insert 4x "C" size batteries in rear battery compartment (10) (remove screw on battery cover to access) or plug in AC adaptor.
- Put the 433-CMU into the unlock position (14)
- To Select voice or tone press the voice/tone button (3) repeatedly to scroll through the options. Stop at
- Adjust volume button (2) to desired volume.
- Place components in order you want to programme them (pads should be on a flat surface and all items within reach)
- Press and hold the add/replace button (4) for one beep.
- Next press program components button on the 433-CMU (5) for two beeps plus closing melodic tone. Programming light will be on
- Flashing number on screen is the last number a component is currently programmed to. For new 433-CMU's the screen will be blank.
- Activate first component (press & release nurse call button or turn motion sensor on and off or press bed/chair pad or turn transmitter on for floor mat or touch the two pasts of the window/exit alarm together and then seperate)
- Press reset button twice
- Press Add/Replace button for two beeps plus closing melodic tone
- Next press programme components button for one beep. Programme light will be steady and ready for next component to be programmed.
- Repeat 2 red bullet point steps above for each component added
- Put 433-CMU into lock position (14)
- Press reset button (7) & test components

Notes

- For use with up to 40 cordless bed pads, chair pads, floor mats, motion sensors, nurse call buttons, reset buttons, window/door exit alarm
- For use with the The 433-PGD Pager. No programming of pager is required, it will sync with the 433-CMU.
- Programming must be done quickly if no activity when in programminbg mode, unit will exit programming mode automatically after 20 seconds
- Bed Pads and Chair Pads will have a 3 second delay when activated
- Bed Pads and Chair Pads will reset themselves if pressure is re-applied.





433-PGD Pager (optional extra)